



TECHO—BLOC

BRANDON FIRE PIT-RECTANGLE

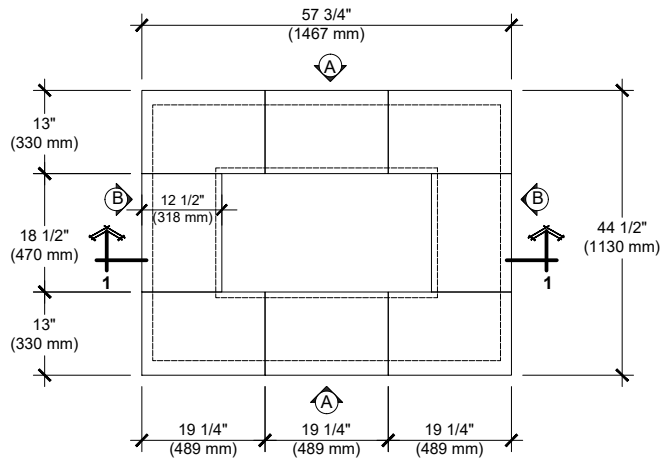


TOP

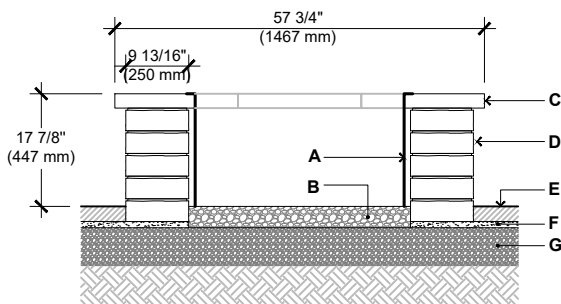


SECTION 1-1

- A. STEEL BOX INSERT
- B. CLEAN STONE 3/4" (20 mm), 4" (100 mm) THICK
- C. PIEDIMONTE CAP (PRE-CUT)
- D. BRANDON 90 mm BLOCK
- E. TECO-BLOC PAVERS OR SLABS
- F. SETTING BED 1" (25 mm)
- G. COMPACTED GRANULAR BASE 0-3/4" (0-20 mm)
- H. BRANDON 90 mm CORNER BLOCK

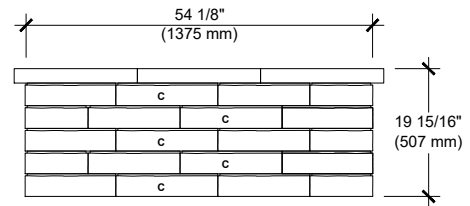

ELEVATION A

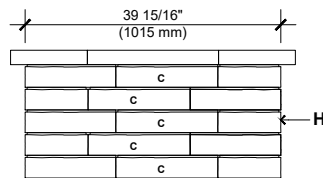

ELEVATION B

QUANTITY OF MATERIALS REQUIRED

- Piedimonte cap: 8
- Brandon 90 mm block **C** : 20
- Brandon 90 mm corner block: 30

NOTE : Secure the blocks using a heat resistant concrete adhesive. The installer must ensure that the installation and use of the fire pit comply with local regulations and code requirements.

Consult our Installation Guide in our website for a detail step by step installation.