



TECHO—BLOC

PRESCOTT FIRE PIT

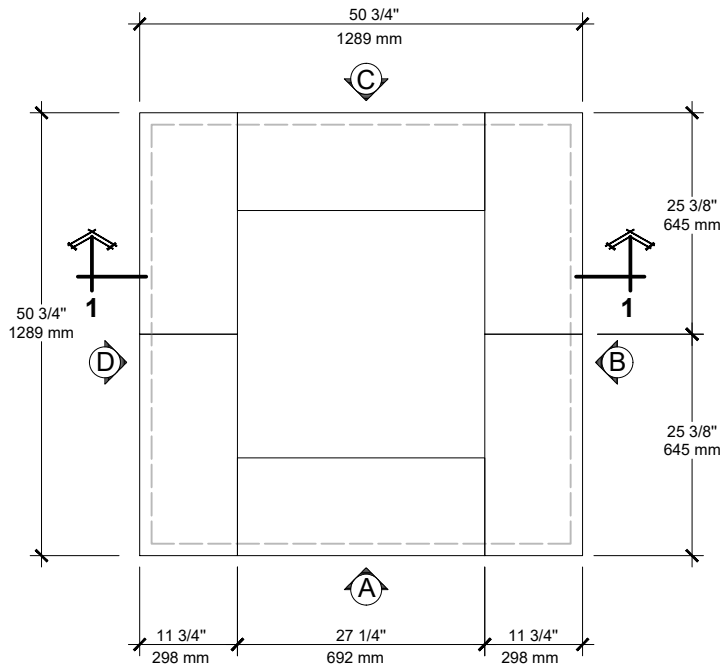


TOP

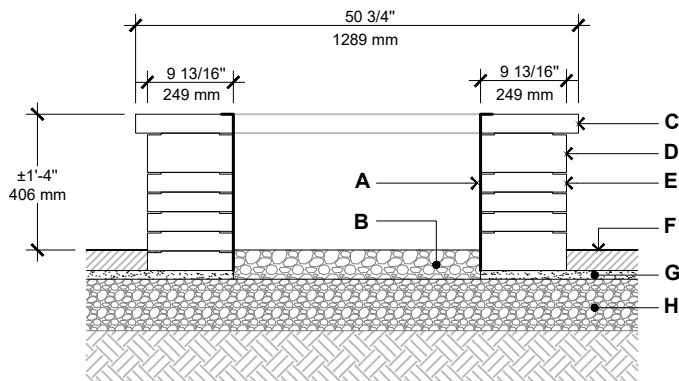


SECTION 1-1


- A. STEEL BOX INSERT
- B. CLEAN STONE 3/4" (20 mm), 4" (100 mm) THICK
- C. PIEDIMONTE CAP (CUT)
- D. PRESCOTT 4.5" BLOCK
- E. PRESCOTT 2.25" BLOCK
- F. TECHO-BLOC PAVERS OR SLABS
- G. SETTING BED 1" (25 mm)
- H. COMPACTED GRANULAR BASE 0-3/4" (20 mm)
(SEE PAVERS THICKNESS OF THE GRANULAR FOUNDATION TABLE)
- I. PRESCOTT 4.5" CORNER BLOCK
- J. PRESCOTT 2.25" CORNER BLOC

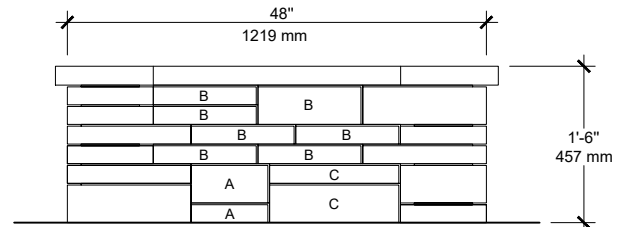


ELEVATION A

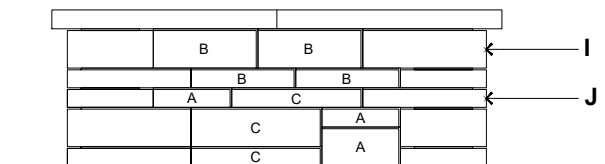

ELEVATION B

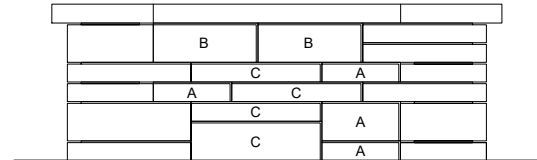

ELEVATION C

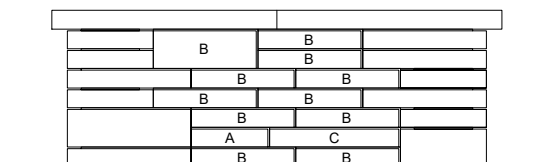

ELEVATION D

QUANTITY OF MATERIALS REQUIRED :

- Piedimonte cap: 6
- Prescott 2.25" block: 7 A, 18 B, 7 C
- Prescott 4.5" block: 3 A, 6 B, 3 C
- Prescott 2.25" corner block: 16
- Prescott 4.5" corner block: 6

NOTE : Secure the blocks using a heat resistant concrete adhesive. The installer must ensure that the installation and use of the firepit comply with local regulations and code requirements.

Consult our Installation Guide in our website for a detail step by step installation.